


# Installation and Operating Instructions

**Model:**  
**HO33BI2, HO36BI4, HO36BIZ4, HO39BI5**  
**HO66BIZ4, HO69BIZ5**

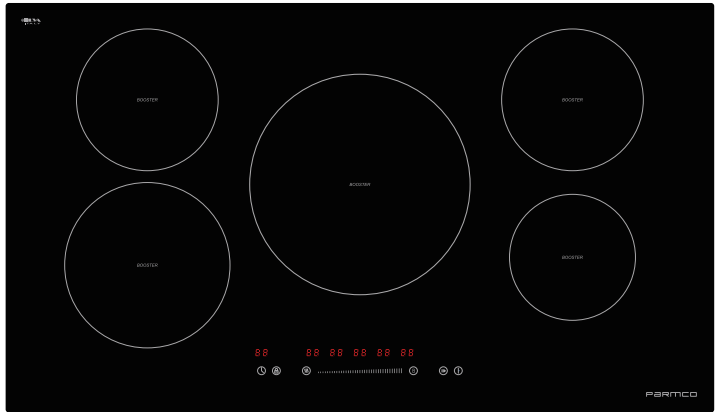

For your convenience, we recommend to attach  
the serial number label HERE.

As part of Parmco Appliances commitment to improving and updating product ranges,  
we reserve the right to alter, change and update technical specifications and appearance  
attributes of all Parmco Appliances products. E&OE

31102024

# PARMCO

Inspiring kitchens, entertaining homes

p: 09 573 5678

f: 09 573 5699

e: sales@parmco.co.nz

w: www.parmco.co.nz



## *Parmco Appliances extended 7 year warranty*

### **The Warranty:**

- This appliance is intended for domestic use in the owners' home. Use of the appliance for commercial purposes will limit the warranty period (please see Parmco website for commercial details).
- Subject to the terms and conditions contained within this warranty, if the product is not of Acceptable Quality (as defined in the Consumer Guarantees Act) within 7 years of the date of original purchase, then Parmco Sales undertakes to repair or, at its sole discretion, replace the product.
- The warranty does not cover the costs of transport, mileage or travelling time if the product is located beyond 30km of a recognised Service Agent.
- This warranty is offered as an extra benefit, and does not affect other legal rights, which can not be modified or excluded by agreement.
- This warranty only applies to goods supplied and installed in the North and South Islands of New Zealand.
- The provisions of this warranty are in addition to the rights and remedies available to consumers under the Consumer Guarantees Act 1993.

Product \_\_\_\_\_ Date of purchase \_\_\_\_\_  
Serial Number \_\_\_\_\_  
Dealer / Retailers Name \_\_\_\_\_

Please retain this Warranty card together with receipt or other proof of purchase date when seeking service during the warranty period

Please contact Parmco at 09 573 5678 if your appliance needs servicing under warranty. Please have your model number and proof of purchase ready. Warranty repairs must be authorized by Parmco.

### **The Warranty is not valid:**

- If the product is not installed and operated in accordance with the operating instructions.
- If the product is not installed to comply with the electrical, gas, plumbing and other Regulations and Codes of Practice in New Zealand.
- If the product is operated on voltages or frequencies outside the normal range for domestic appliances in New Zealand.
- If the product is not used in normal domestic use, or if it is used in a business as defined in the Consumer Guarantees Act.
- If any serial number has been removed or defaced.
- If proof of date of purchase is not supplied, except at the sole discretion of Parmco Sales. Proof of purchase can be for the product itself, or if installed with a kitchen or house then proof of purchase can be from a Parmco reseller of products supplied by Parmco.
- If the products are purchased in a second hand condition from other parties (including but not limited to TradeMe, Sella, etc.)

### **Liability under this warranty will not be accepted for:**

- Wear and tear caused by normal domestic use of the product.
- Damage in transport.
- Damage caused to the product by neglect, abuse, negligence, wilful act or misuse.
- Any costs associated with the repair, replacement, removal or reinstallation of products installed in a damaged condition.
- Any defect caused by accident, misuse, neglect, tampering with or unauthorised modifications of the appliance or any attempt at internal adjustment or repair by any person other than an Authorised Service Agent.
- Service calls that relate principally to the following:
  - Instruction on how to use the product.
  - Repair or replacement of house fuses, electrical wiring, gas fitting or plumbing.
  - Normal or scheduled maintenance including blocked filters or ducting.
  - Consumable items such as light bulbs.
  - Any damage to hobs caused by spills when cooking.
  - Any breakage or damage of glass items.
  - Any damage caused by non recommended product used for cleaning, maintaining, lubricating or similar.
- Any aspect relating to the installation of the product, or damage caused during installation including blocked access for repair.
- Any third party (including reseller) or consequential loss or damage (direct or indirect) however arising.

Subject to updates without prior notice, please visit [www.parmco.co.nz](http://www.parmco.co.nz) for the latest version.

E & O.E. 727626092020



Dear Valued Customer,

Thank you and congratulations on purchasing your new Parmco appliance.

All Parmco products are made to the highest quality and design standards. We are sure you will enjoy your new appliance.

As a note, please read through these instructions carefully. These will assist you in gaining a complete understanding of the functions and features offered by your appliance. Please take special note of all detailed technical information and installation instructions. It is essential that you follow these instructions to ensure the safety and reliability of this appliance.

Furthermore, not using appropriate personnel to install this appliance may affect any future warranty claims lodged, so please check with Parmco Appliances before any installation is carried out.

We hope you enjoy your new appliance. If you would like to find out more about this product or any other products in Parmco's extensive range, visit us online at [www.parmco.co.nz](http://www.parmco.co.nz).

Regards,  
**The Parmco Team**

# PARMCO

Inspiring kitchens, entertaining homes

# INDEX

<b>SAFETY WARNINGS</b> .....	5
<b>INSTALLATION</b> .....	13
<b>GUIDE TO THE APPLIANCE</b> .....	19
<b>CARE AND CLEANING</b> .....	39
<b>QUESTIONS AND QUICK CHECK</b> .....	40
<b>ERROR CODE</b> .....	44
<b>WASTE MANAGEMENT</b> .....	45

**Congratulations** on the purchase of your new hob. We would like to thank you for purchasing a product from our wide range of domestic appliances. We recommend that you spend some time to read this Instruction / Installation Manual in order to fully understand how to install correctly and operate it. For installation, please read the installation section. Read all the safety instructions carefully before use and keep this Instruction / Installation Manual for future reference. If you transfer the appliance to a third party, also hand over this instruction manual.

- ❶ The figures in this instruction manual may differ in some details from the current design of your appliance. Nevertheless follow the instructions in such a case.
- ❷ Any modifications, which do not influence the functions of the appliance. shall remain reserved by the manufacturer. Please dispose of the packing with respect to your current local and municipal regulations.
- ❸ The appliance you have purchased may be an enhanced version of the unit this manual was printed for. Nevertheless, the functions and operating conditions are identical. This manual is therefore still valid. Technical modifications as well as misprints shall remain reserved.

# 1. SAFETY WARNINGS

Please read this user manual thoroughly before attempting to use this appliance for the first time. This manual contains important information on safe installation, use and care of the appliance. Keep these instructions for reference and pass them on to future user.

All information included in those pages serve for the protection of the operator. If you ignore the safety information and safety instructions, you will endanger your health and life.

Store this manual in a safe place so you can use it whenever it is needed. Strictly observe the instructions to avoid damage to persons and property.

**MAKE SURE THAT THIS MANUAL IS AVAILABLE TO ANYONE USING THE APPLIANCE AND MAKE SURE THAT IT HAS BEEN READ AND UNDERSTOOD PRIOR TO USING THE APPLIANCE.**

## **Installation**

### **Electrical Shock Hazard**

- The technical data of your energy supply must meet the data on the rating label. Disconnect the appliance from the mains electricity supply before carrying out any work or maintenance on it.
- Do not connect the appliance to the mains if the appliance itself or the power cord or the plug are visibly damaged.
- All modifications to the electrical mains to enable the installation of the appliance must be performed by a qualified professional.
- Connection to a good earth wiring system is essential and mandatory. A check-up of existing and newly-made connections must be done by an authorized professional.

- Alterations to the domestic wiring system must only be made by a qualified electrician. Do not modify the energy supply. The connection must be carried out in accordance with the current local and legal regulations.
- The room the appliance is installed in must be dry and well-ventilated. When the appliance is installed, an easy access to all control elements is required.
- Do not install the appliance near to curtains or upholstered furniture. **RISK OF FIRE!**
- Failure to follow this advice may result in electrical shock or death.

## **Cut Hazard**

- Take care - panel edges are sharp.
- Failure to use caution could result in injury or cuts.

## **Important safety instructions**

- Read these instructions carefully before installing or using this appliance.
- While unpacking, the packaging materials (polythene bags, polystyrene pieces, etc.) should be kept away from children and pets. **RISK OF INJURY! CHOKING HAZARD!**
- When you unpack the appliance, you should take note of the position of its components in case you have to repack and transport it at a later point of time.
- No combustible material or products should be placed on this appliance at any time.
- The appliance must be transported and installed by at least two persons.
- Please make this information available to the person responsible for installing the appliance as it could reduce your installation costs.
- In order to avoid a hazard, this appliance must be installed according to these instructions for installation.
- This appliance is to be properly installed and earthed only by a suitably qualified person.
- This appliance should be connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.

- The veneering of cabinets has to be fixed with a heat-resistant glue, that is able to withstand a temperature of 100 °C.
- Adjacent furniture or housing and all materials used for installation must be able to resist a temperature of min. 85 °C above the ambient temperature of the room the appliance is installed in during operation.
- Do not install the appliance in rooms or at areas which contain flammable substances as petrol, gas or paint. This warning also refers to the vapour these substances release.
- Cooker-hoods should be installed according to their manufacturers' instructions.
- The safety distance between the hob and a wall/cupboard above should be at least 450 mm.
- The safety distance between the hob and an extractor hood above should be at least 650 mm.
- Household equipment and connection leads must not touch the hob as the insulation material is usually not heat-resistant.
- Only use hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.
- Failure to install the appliance correctly could invalidate any warranty or liability claims.

## **Operation and maintenance**

### **Electrical Shock Hazard**

- Never touch the power plug, the power switch or other electrical components with wet or damp hands. RISK OF ELECTRIC SHOCK!
- Operate the appliance with 220 ~ 240 V AC / 50 Hz only.



- Do not cook on a broken or cracked hob. If the hob surface is break or crack, switch the appliance off immediately at the mains power supply (wall switch) and contact a qualified technician.
- Switch the hob off at the wall before cleaning or maintenance.
- Failure to follow this advice may result in electrical shock or death.

## **Health Hazard**

- This appliance complies with electromagnetic safety standards. Your pacemaker must be designed in compliance with the corresponding regulations so it will not cause any interferences between the pacemaker and the appliance. Consult the manufacturer of your pacemaker or your doctor to decide whether it meets the forced requirements or if any incompatibilities do exist.

## **Hot Surface Hazard**

- During use, accessible parts of this appliance will become hot enough to cause burns.
- Do not let your body, clothing or any item other than suitable cookware contact the ceramic glass until the surface is cool.
- Metallic objects such as knives, forks, spoons and pan lids should not be placed on the hob surface since they can get hot
- The accessible parts of the appliance become hot during operation, so keep children away. Touching the appliance while it is operating can cause serious burns.
- Handles of saucepans may be hot to touch. Check saucepan handles do not overhang other cooking zones that are on. Keep handles out of reach of children.
- The appliance will become hot while operating and will retain and emit heat even if it has stopped operating.
- Failure to follow this advice could result in burns and scalds.

## **Cut Hazard**

- The razor-sharp blade of a hob scraper is exposed when the safety cover is retracted. Use with extreme care and always store safely and out of reach of children.
- Failure to use caution could result in injury or cuts.

## Important safety instructions

- Store this manual in a safe place so you can use it whenever it is needed. Strictly observe the instructions to avoid damage to persons and property.
- Only use cookware which is suitable to be used on ceramic glass; otherwise you will damage the appliance.
- Do not switch on the hob before you have put a cookware on it.
- Do not operate the appliance unless all components are installed properly.
- The hob should be clean at every time. Soiled cooking zones do not transfer the heat correctly.
- Protect the hob against corrosion.
- Never try to repair the appliance yourself. Repairs carried out by unauthorized persons can cause serious damage. If the appliance does not operate properly, please contact the shop you purchased the appliance at. Original spare parts should be used only.
- When you move the appliance, hold it at its base and lift it carefully. Keep the appliance in an upright position.
- Never leave the appliance unattended when in use. Boilover causes smoking and greasy spillovers that may ignite. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- Never use your appliance as a work or storage surface.
- Never leave any objects or utensils on the appliance.
- Never use your appliance for warming or heating the room.
- After use, always turn off the cooking zones and the hob as described in this manual (i.e. by using the touch controls).
- Do not allow children to play with the appliance or sit, stand, or climb on it.
- Do not store items of interest to children in cabinets above the appliance. Children climbing on the hob could be seriously injured.
- Always supervise children when they are near the appliance.
- Only allow children to use the appliance without supervision, when adequate instructions have been given before so that the child is able to use the appliance in a safe way and understands the risks of improper use.

- Do not leave children alone or unattended in the area where the appliance is in use.
- Children or persons with a disability which limits their ability to use the appliance should have a responsible and competent person to instruct them in its use. The instructor should be satisfied that they can use the appliance without danger to themselves or their surroundings.
- Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be done by a qualified technician.
- Do not allow anybody who is not familiar with this instruction manual to operate the appliance. The steam will cause serious damage to the electric components of the appliance. **RISK OF ELECTRICAL SHOCK!**
- Do not use a steam cleaner to clean your hob.
- Do not place or drop heavy objects on your hob.
- Do not stand on your hob.
- Do not use pans with jagged edges or drag pans across the glass surface as this can scratch the glass.
- Do not use scourers or any other harsh abrasive cleaning agents to clean your hob, as these can scratch the surface and damage the ceramic glass.
- If the supply cord is damaged, it must be replaced by the manufacturer or an authorized aftersales service or a qualified professional only, its service agent or similarly qualified persons in order to avoid a hazard. The appliance is intended for private use only.
- This appliance is intended to be used in a domestic household environment only! Commercial use of any kind is not covered under the manufacturer's warranty!
- The appliance is intended for indoor-use only.
- The appliance is not intended to be operated for commercial purposes and in public transport.
- **WARNING:** The appliance and its accessible parts become hot during use.

Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.

- **WARNING:** Danger of fire: do not store items on the cooking surfaces.

- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock, for hob surfaces of glass-ceramic or similar material which protect live parts

- A steam cleaner is not to be used.

- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

- The air vents of the appliance or its built-in structure (if the appliance is suitable for being built-in) must be completely open, unblocked and free of any kind of dirt.

- In case of an event caused by a technical malfunction, disconnect the appliance from the mains. Report the malfunction to your service centre so it can be repaired.

- Do not use adapters, multiple sockets and extension cords for connecting the appliance to the mains.

- Do not carry out any modifications to your appliance.

- Switch off soiled cooking zones.

- Switch off the complete hob if any damage or malfunction occurs.
- After use, always switch off the cooking zones as described in this manual (i.e. by using the touch controls). Do not rely on the autodetection feature to switch off the cooking zones when you remove the cookware.
- The rating plate must not be removed or made illegible, otherwise all terms of the warranty become invalid!

### SAVE THESE INSTRUCTIONS

☆ The manufacturer and distributor are not responsible for any damage or injury in the event of failure to comply with these instructions.

## 2. INSTALLATION


### Unpacking and positioning

- Unpack the appliance carefully.
- The appliance may be equipped with the transport-protection. Be very careful and do not use any aggressive or abrasive detergents to remove residuals of the transport protection.
- Check that the appliance and the power cord are not damaged.
- Connect the appliance to a dedicated socket only.
- Do not install the appliance in a place where it may come in contact with water or rain; otherwise the insulation of the electrical system will be damaged.
- Connect the appliance to the mains properly.

### Selection of installation equipment

- Be sure the thickness of the work surface is at least 30mm. Please select heat-resistant work surface material to avoid larger deformation caused by the heat radiation from the hob.
- For the purpose of installation and use, a minimum of 50mm space shall be preserved around the hole.
- The safety distance between the hob and a wall cupboard above should be at least 450mm.
- The safety distance between the hob and an extractor hood above should be at least 650mm.
- Cut out the work surface according to the sizes shown in the drawing.


Models	L(mm)	W(mm)	H(mm)	D(mm)	A(mm)	B(mm)	X(mm)
HO33BI2	300	520	62	58	270	490	50mini
HO36BI4	590	520	62	58	560	490	50 mini.
HO36BIZ4 HO66BIZ4	590	520	56	52	560	490	50 mini.
HO39BI5 HO69BIZ5	900	520	56	52	790	490	50 mini.

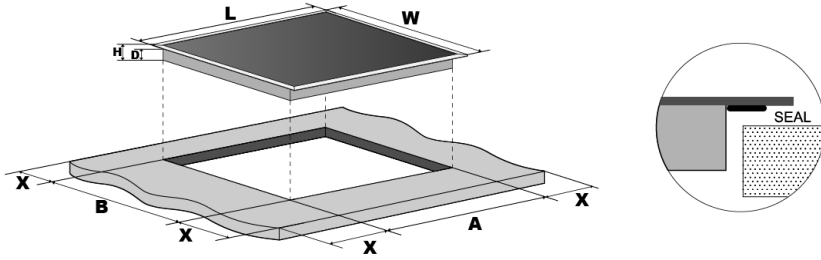

**ATTENTION:**

- ❶ Under any circumstances, make sure the hob is well ventilated and the air inlet and outlet are not blocked. Ensure the hob is in good work state. As shown below:
- ❷ Note: The safety distance between the hob and the cupboard above should be at least 760mm.

A (mm)	760
B (mm)	50 minimum
C (mm)	30 minimum
D	Air intake
E	Air exit 5mm

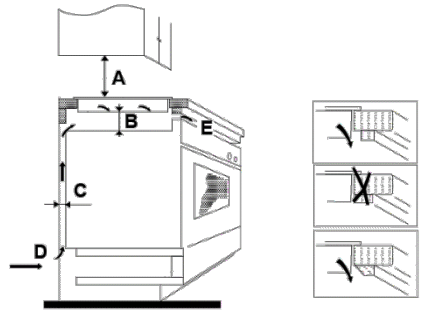

- ❸ Weight and Dimensions are approximate. Because we continually strive to improve our products, we may change specifications and designs without prior notice.

**Before you install the hob, make sure that**

- ❶ the work surface is square and level, and no structural members interfere with space requirements.
- ❷ the work surface is made of a heat-resistant material.
- ❸ if the hob is installed above an oven, the oven has a built-in cooling fan.
- ❹ the installation will comply with all clearance requirements and applicable standards and regulations.
- ❺ a suitable isolating switch providing full disconnection from the mains power supply is incorporated in the permanent wiring, mounted and positioned to comply with the local wiring rules and regulations.

- ⑥ The isolating switch must be of an approved type and provide a 3 mm air gap contact separation in all poles (or in all active [phase] conductors if the local wiring rules allow for this variation of the requirements). The isolating switch will be easily accessible to the customer with the hob installed.
- ⑦ you consult local building authorities and by-laws if in doubt regarding installation.
- ⑧ you use heat-resistant and easy-to-clean finishes (such as ceramic tiles) for the wall surfaces surrounding the hob.
- ⑨ The power cable must not come into contact with cabinet doors or drawers.
- ⑩ The appliance must be supplied with an adequate flow of fresh air from outside the cabinet to the base of the hob.


## Before locating the fixing brackets

The unit should be placed on a stable, smooth surface (use the packaging). Do not apply force onto the controls protruding from the hob.

Stretch out and stick the supplied tape [02] along the underside edge of the hob, ensure the ends overlap. Trim off any excess tape and dispose of it.





[02]

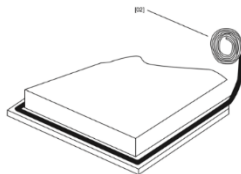


## Locating the fixing brackets

Fix the hob brackets by screw two brackets on the bottom of hob (see picture).

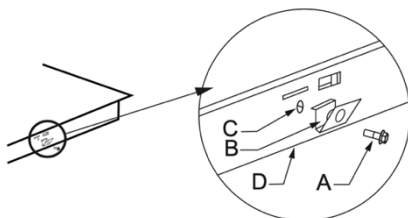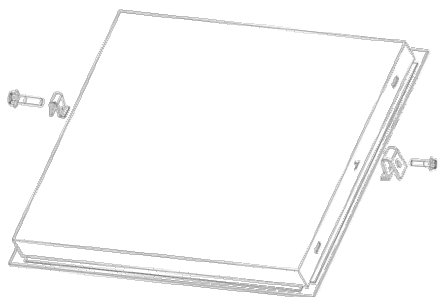




For HO39BI5 and HO69BIZ5, fix the hob brackets by screw two brackets on the bottom of hob (see picture).

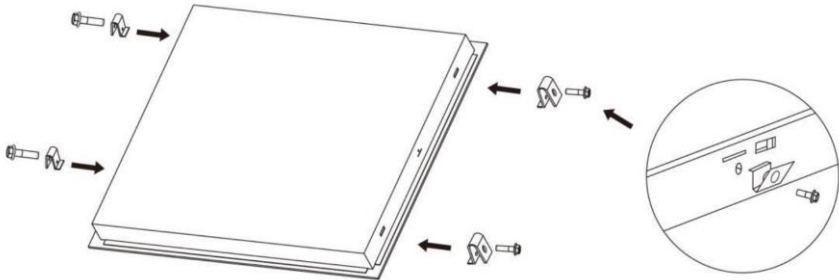

Then install the hob into the cutout of the worktop. Apply gentle downwards pressure onto the hob to push it into the worktop.

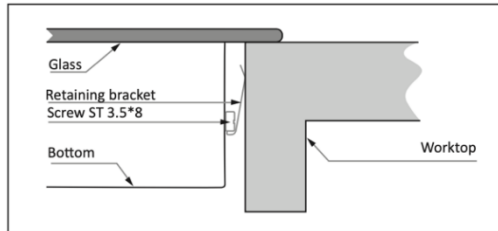

## When you have installed the hob, make sure that

- ❶ the power supply cable is not accessible through cupboard doors or drawers.
- ❷ there is adequate flow of air from outside the cabinetry to the base of the hob.
- ❸ if the hob is installed above a drawer or cupboard space, a thermal protection barrier is installed below the base of the hob.
- ❹ the isolating switch is easily accessible by the customer.


## Cautions

- ❶ The hob must be installed by qualified personnel or technicians. We have professionals at your service. Please never conduct the operation by yourself.

- ② The hob shall not be mounted to cooling equipment, dishwashers and rotary dryers.
- ③ The hob shall be installed such that better heat radiation can be ensured to enhance its reliability.
- ④ The wall and induced heating zone above the work surface shall withstand heat.
- ⑤ To avoid any damage, the sandwich layer and adhesive must be resistant to heat.
- ⑥ A steam cleaner is not to be used.
- ⑦ This hob can be connected only to a supply with system impedance no more than 0.427 ohm. In case necessary, please consult your supply authority for system impedance information.

## Connecting the hob to the mains power supply

The power supply should be connected in compliance with the relevant standard, or a single-pole circuit breaker. The method of connection is shown as the diagram.

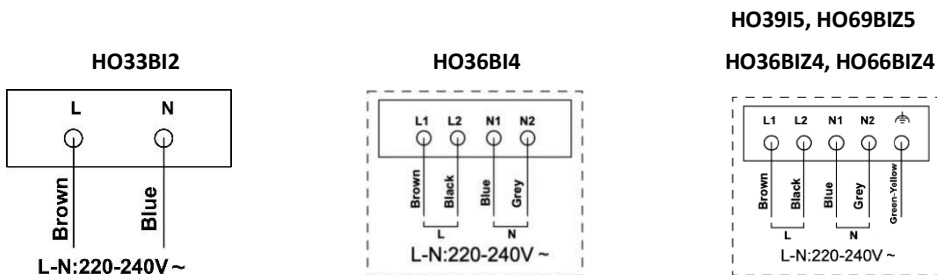

This hob must be connected to the mains power supply only by a suitably qualified person, who is familiar with and adheres to the local requirements and supplementary regulations of your electricity supplier. Do not carry out the installation yourself. **RISK OF ELECTRIC SHOCK.** Before connecting the hob to the mains power supply, check that:

- ① The domestic wiring system is suitable for the power drawn by the hob.
- ② The voltage corresponds to the value given in the rating plate

- ③ The power supply cable sections can withstand the load specified on the rating plate.

To connect the hob to the mains power supply, do not use adapters, reducers, or branching devices, as they can cause overheating and fire.

The power supply cable must not touch any hot parts and must be positioned so that its temperature will not exceed 75°C at any point.

Check with an electrician whether the domestic wiring system is suitable without alterations. Any alterations must only be made by a qualified electrician.




1. If the cable is damaged or needs replacing, this should be done by an after-sales technician using the proper tools, so as to avoid any accidents.
2. If the appliance is being connected directly to the mains supply, an omnipolar circuit breaker must be installed with a minimum gap of 3mm between the contacts.
3. The installer must ensure that the correct electrical connection has been made and that it complies with safety regulations.
4. The cable must not be bent or compressed.
5. The cable must be checked regularly and only replaced by a proper qualified person.
6. Your household power supply must meet the power consumption of the appliance.
7. When the socket is not accessible for the user or a fixed electrical connection of the appliance is required, an all-pole disconnecting device must be incorporated during installation. Disconnecting devices are switches with a contact opening distance of at least 3 mm. These include LS-switches, fuses and protectors (EN 30335). Read the information on the nameplate and the connection diagram before connecting the appliance to the mains. The electricity supply must be performed via a 16A automatic cut-out. If in doubt, always contact the local building authorities and consult the relevant legal provisions.


### 3. GUIDE TO THE APPLIANCE

#### TOP VIEW


**H033BI2**

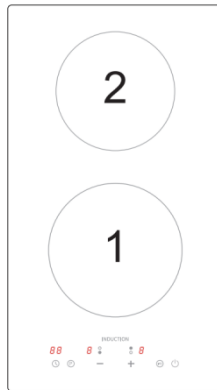


**H036BI4**

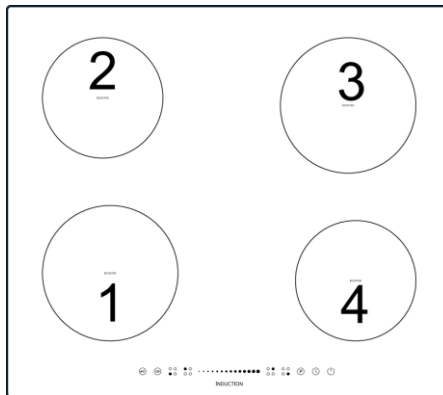


## H036BIZ4

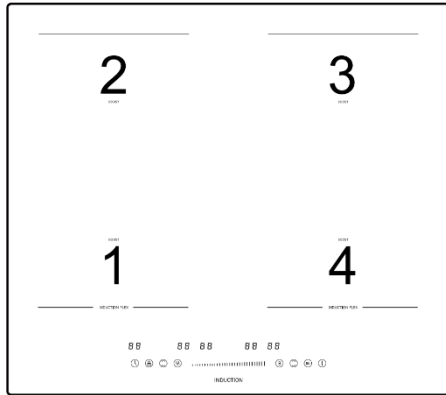


## H039BI5

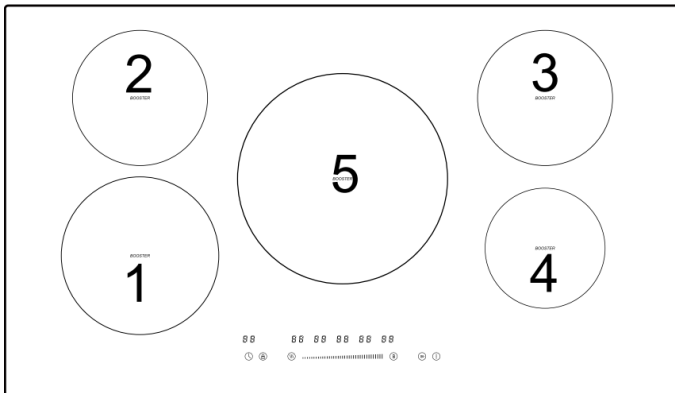

### H066BIZ4

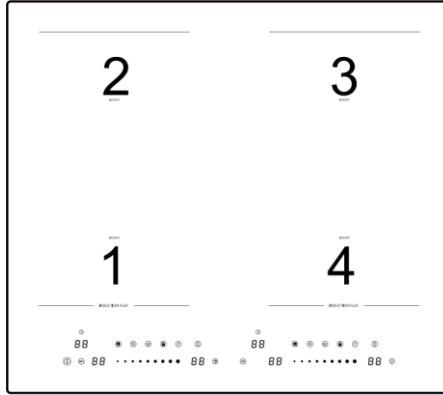

### H069BIZ5

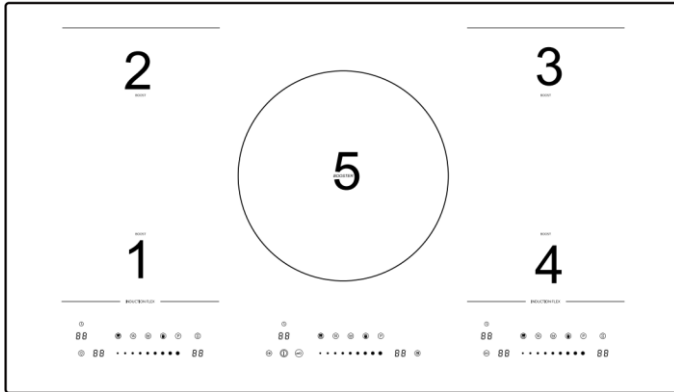


Model #	H033BI2	H036BI4	H036BIZ4
Power of zone – 1	1200W / 1500W	1800W / 2200W	1800W / 2200W
Power of zone – 2	1800W / 2200W	1200W / 1500W	1800W / 2200W
Power of zone – 3	/	1800W / 2200W	1800W / 2200W
Power of zone – 4	/	1200W / 1500W	1800W / 2200W
Power of zone – 5	/	/	/


Model #	HO39BI5	HO66BIZ4	HO69BIZ5
Power of zone – 1	1800W / 2200W	1800W / 2200W	1800W / 2200W
Power of zone – 2	1600W / 2000W	1800W / 2200W	1800W / 2200W
Power of zone – 3	1600W / 2000W	1800W / 2200W	1800W / 2200W
Power of zone – 4	1400W / 1600W	1800W / 2200W	1800W / 2200W
Power of zone – 5	2300W / 3000W	/	2300W / 3000W

## CONTROL PANEL


### HO33BI2

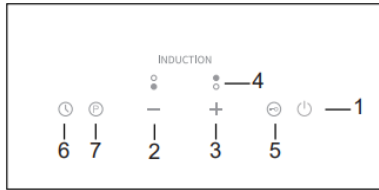


### HO36BI4

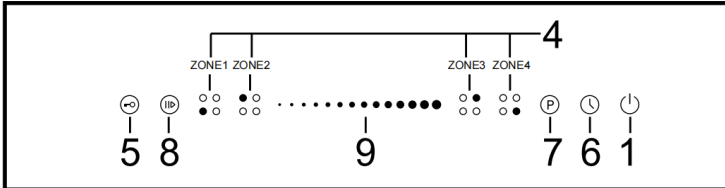


### HO36BIZ4

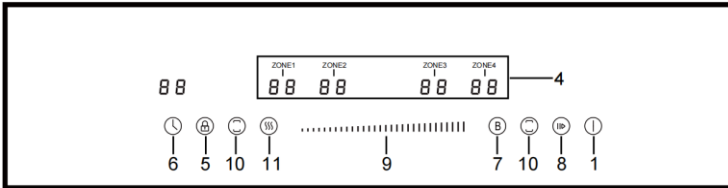


## HO39BI5

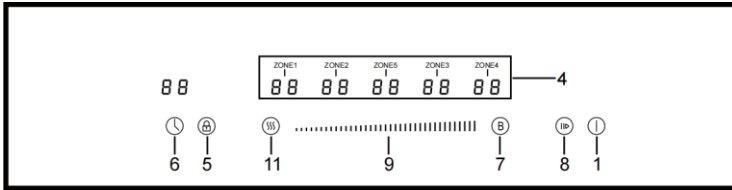

## HO66BIZ4

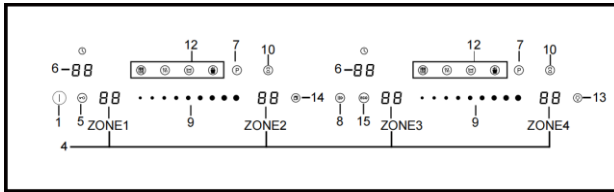

## HO69BIZ5

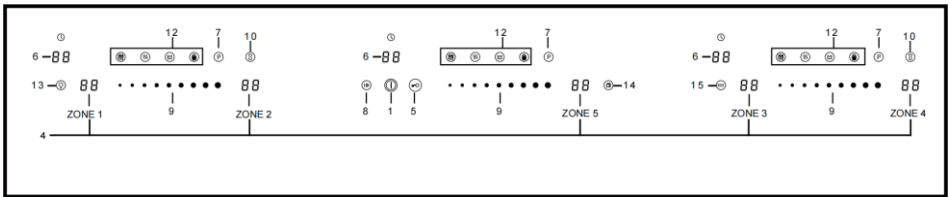

### Control Panel Keys

KEY #	FUNCTIONS	KEY #	FUNCTIONS
Key 1.	ON/OFF	Key 9.	Slider touch
Key 2.	MINUS	Key 10.	Flex Zone
Key 3.	PLUS	Key 11.	Keep warm
Key 4.	Zone selection	Key 12.	Quick menus
Key 5.	Child lock	Key 13.	Always on mode
Key 6.	Timer	Key 14.	Secondary menus
Key 7.	Boost	Key 15.	ECO mode
Key 8.	Pause		




## Before using your New Hob

- Read this guide, taking special note of the ‘Safety Warnings’ section.
- Remove any protective film that may still be on your hob.
- Clean the glass-ceramic

## Using the Touch Controls

- The controls respond to touch, so you don’t need to apply any pressure.
- Use the ball of your finger, not its tip (see figure below).




- You will hear a beep each time a touch is registered.
- Make sure the control panel is always clean, dry, and that there is no object (e.g., a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

## Choosing the right Cookware


- Use glass-ceramic suitable cookware only.
- The base of cookware must have a minimum diameter relevant to the diameter of the cooking zone you use the cookware on.
- Do not use cookware with jagged edges or a curved base.



Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Always centre your pan on the cooking zone.

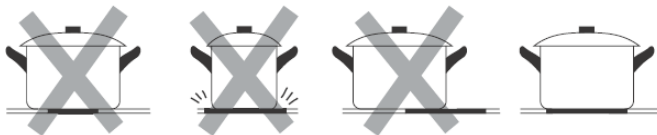

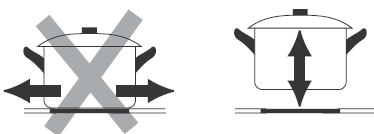

Always lift pans off the hob – do not slide, or they may scratch the glass.





## For Induction hob


- Only ferromagnetic cookwares are suitable for induction cooking. Look for the induction symbol on the packaging or on the bottom of the pan. 
- You can check whether your cookware is suitable by carrying out a magnet test. Move a magnet towards the base of the pan. If it is attracted, the pan is suitable for induction.
- If you do not have a magnet:
  1. Put some water in the pan you want to check.
  2. Follow the steps under 'To start cooking'.
  3. If  does not flash in the display and the water is heating, the pan is suitable.
- Cookware made by the following materials is not suitable: pure stainless steel, aluminum or copper without a magnetic base, glass, wood, porcelain, ceramic, and earthenware.
- Use pans which is wide enough to completely cover the cooking area. If it is slightly wider the energy will be used at its maximum efficiency. Cookware diameter smaller than below table will not be supported by induction hob.

Size of burner (mm)	The minimum pot (diameter /mm)
160	120
180	140
210	160
280	220

While using unsuitable cookware the cooking zone does not heat up. The display goes off automatically after 1 minute even if you have not placed suitable cookware on the cooking zone

## A Word on Induction Cooking

Induction cooking is a safe, advanced and efficient cooking technology. It works by electromagnetic vibrations generating heat directly in the pan, rather than indirectly through heating the glass surface. The glass becomes hot only because the pan eventually warms it up.

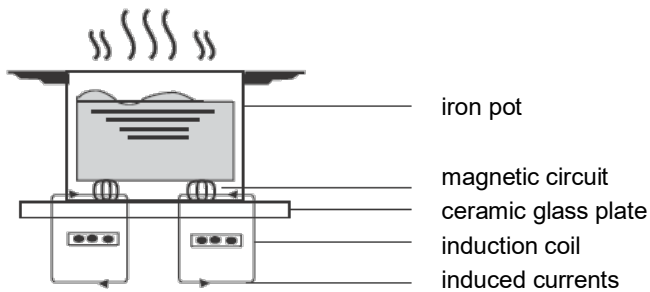

## Using your Hob with touch control panel

### Switching the hob on and off


Switch the hob on and off by using the main switch.

1. Touch the ON/OFF key (1) for one second.


All the indicators show “-“. The Hob is in standby mode.

### For HO36BIZ4, HO39BI5, HO66BIZ4, HO69BIZ5

After power on, the buzzer beeps once, all displays show as below, indicating that the hob has entered the state of standby mode.

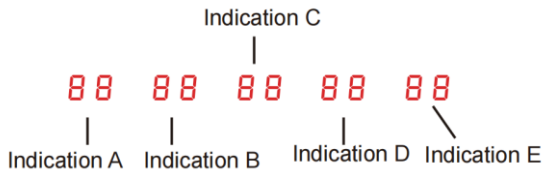

2. Place a suitable pan on the cooking zone that you wish to use. Make sure the bottom of the pan and the surface of the cooking zone are clean and dry.

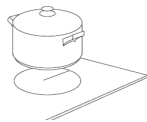

3. Select zone by touch corresponding zone selection key (4), an indicator next to the key will flash.
4. Select power level by touching the MINUS (2) or PLUS key (3). The

power can be changed during cooking as required.

**For HO36BI4, HO36BIZ4, HO39BI5, HO66BIZ4, HO69BIZ5**

Touch the slider to the level you want to set.



• If you don't choose a heat setting within 1 minute, the hob will automatically switch off. You will need to start again from step 1.

5. While cooking, the power level can be changed at any time.

**When you have finished cooking**

1. Selecting the burner that you wish to switch off by pressing the zone selection key (4).
2. Turn the cooking zone off by touching MINUS key (2) until power level reduce to "0".

**For HO36BI4, HO36BIZ4, HO39BI5, HO66BIZ4, HO69BIZ5**

Touch the slider to "0".



NOTE: make sure the display shows "0".


Turn the whole cooktop off by touching the ON/OFF control.




**Energy saving (Only for HO66BIZ4, HO69BIZ5)**

This product is designed with the concept of energy saving. It owns an elegant and simple user interface. When you need more functions, you can select keys (14) and more function will appear.

1. Switch on the hob, then all lights will be on. The user interface will look like below:

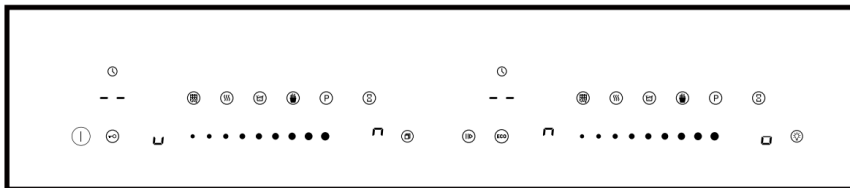

2. After 30 seconds, if there is no operation, the hob enter energy saving function. The user interface will look like below:

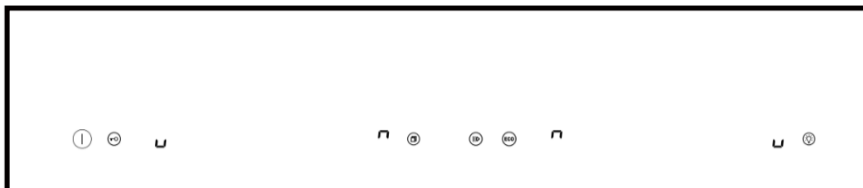

3. If you want to call back more functions, you can choose Key (14).

### **Secondary menu (Only for HO66BIZ4, HO69BIZ5)**

The Secondary menu is used to provides more cooking options.


To save energy, 30 seconds after switching on, if there is no operation, the secondary menu will enter energy saving function.

Once the secondary menu function is selected, it will call back The LED light of timer, quick menus, keep warm, booster and flexible zone.

#### **To enter secondary menus:**


Initially, the light of Key (14) is in half-bright mode. Press Key (14) to enter to secondary menu. And the light of Key (14) will be in full-bright mode.

The user interface will be:

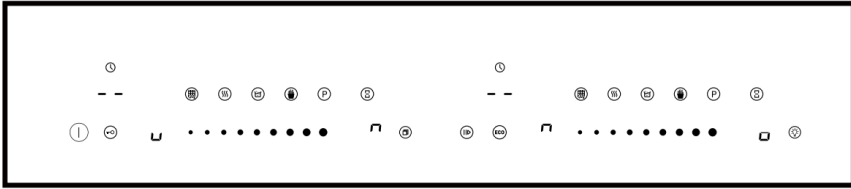

**To exit secondary menus:**

Press again Key (14) to cancel secondary menus. The light of Key (14) will be in half-bright mode. The user interface will be:

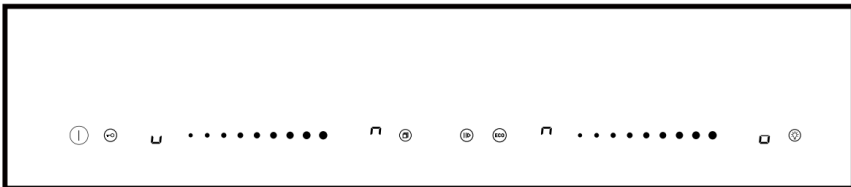

Note: To save energy, this feature needs to be re-activated when the power is turned back on.

**Always on mode (Only for HO66BIZ4, HO69BIZ5)**

If there is no operation in the user interface, in order to simplify the user interface, all the lights of the HO66BIZ4, HO69BIZ5 will be off, except Key 4. If you want the lights to be on stay on, you can choose always on mode.

**To enter always on mode:**

Initially, the light of Key (13) is in half-bright mode. Press Key (13) to enter to always on mode and the light of Key (13) will be in full-bright mode.

**To exit always on menus**

Press again Key (13) to cancel always on mode and the light of Key (13) will be in half-bright mode.

Note: To save energy, this feature needs to be re-activated when the power

is turned back on.

### **Residual Heat Warning (Beware of hot surfaces)**

When the hob has been operating for some time, there will be some residual heat. The power indicator will appear “H” or red light twinkling to warn you to keep away from it.

It will disappear when the surface has cooled down to a safe temperature. It can also be used as an energy saving function if you want to heat further pans, use the cooking zone that is still hot.

### **Using Boost function**

#### **To activate the boost function**

1. Select the zone with boost function (with word “Boost”).
2. Select the zone with Boost, then touching the BOOST key (7), the zone indicator shows “P” and the power reach Max



#### **Cancel Boost function**

1. Select the zone under Booster mode.
2. Touching the MINUS key (2) to cancel the Boost function, and select the level you want to set.

#### **For HO36BI4, HO36BIZ4, HO39BI5, HO66BIZ4, HO69BIZ5**

Touching Slider touch (9) to cancel the Boost function, and select the level you want to set.



**NOTE:** Boost function can only last for 5 minutes, after that the zone will go to level 9 automatically.

**NOTE:** For HO66BIZ4 and HO69BIZ5, please make sure the key (10) is on before you activate this function.

## Child Lock Function

You can use Child lock function to prevent unintended use (for example children accidentally turning the cooking zones on).

### To lock the controls

Touch the Child lock key (5) until the indicator show “Lo”.

### To unlock the controls

Make sure the hob is turned on.

Touch and hold the Child lock key (5) for 3 seconds.

You can now start using your hob.



When the hob is in Child lock mode, all the controls are disable except the main switch key, you can always turn the hob off with the main switch in an emergency, but you shall unlock the hob first in the next operation.

## Auto Shutdown

Safety feature of the hob is auto shut down. This occurs whenever you forget to switch off a cooking zone. The default shutdown times are shown in the table below:

### For HO33BI2, HO36BI4:

Power level	1	2	3	4	5	6	7	8	9
Default working timer (hour)	8	8	8	4	4	4	2	2	2

### For HO36BIZ4, HO39BI5 HO66BIZ4, HO69BIZ5:

Power level	1-6	7-10	11-14
Default working timer (hour)	8	4	2

## Using the Timer

You can use the timer in two different ways:

- You can use it as a minute minder. In this case, the timer will not turn any cooking zone off when the set time is up.



- You can use it as a cut off timer to turn one or more cooking zones off when the set time is up.
- You can set the timer up to 99 minutes.

### Using the Timer as a Minute Minder


1. Make sure the hob is turned on, and none cooking zone is in selecting mode.

Note: you can use the minute minder before or after cooking zone setting finished.

2. Touch timer key (6), “05”/ “10” will show in the timer display.
3. Set the desired minutes by touching the MINUS key (2) or PLUS key (3).

#### For HO36BI4, HO36BIZ4, HO39BI5, HO66BIZ4, HO69BIZ5:


Set the desired minutes by touching the slider control.

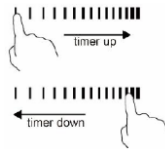

4. Touch timer key again, then number to represent tens digit will flash.
5. Set the desired dozens of minutes by touching MINUS key (2) or PLUS key (3).

#### For HO36BI4, HO36BIZ4, HO39BI5,HO66BIZ4, HO69BIZ5:

Set the desired dozens of minutes by touching the slider control.

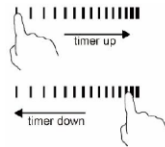

When the time is set, it will begin to count down immediately. The display will show the remaining time.

A signal sound will beep for 10 seconds and the timer indicator shows “ \_ \_ ” when the setting time finished.

### Setting the timer to turn one or more cooking zones off

#### If the timer is set on one zone:

1. Selecting the heating zone key (4) that you want to set timer.

2. Touch timer key (6), the “05”/ “10” will show in the timer display.
6. 3. Set the desired minutes by touching the MINUS key (2) or PLUS key (3).

**For HO36BI4, HO36BIZ4, HO39BI5 HO66BIZ4, HO69BIZ5:**



Set the time by sliding on the control (9).




4. Touch timer key again, then number to represent tens digit will flash. Set the desired dozens of minutes.



When the time is set, it will begin to count down immediately. The display will show the remaining time.


 **NOTE:** The red dot next to power level indicator will illuminate indicating that the zone is in timer mode. 

When cooking timer expires, the corresponding cooking zone will be switch off automatically.

 **NOTE:** Other cooking zones will keep operating if they are turned on previously.

**If the timer is set on more than one zone:**

When you set the time for several cooking zones simultaneously, decimal dots of the relevant cooking zones are on. The minute display shows the remaining time. The dot of the corresponding zone flashes.

Once the countdown timer expires, the corresponding zone will switch off. Then it will show the remaining activated timer and the dot of corresponding zone will flash. 

To check the remaining time set on a particular zone, touch the zone (4) and the corresponding timer will be shown in the timer indicator.

**Cancel the timer**

1. Select the zone that you want to cancel the timer.

2. Touch the timer key (6), the indicator will flash.
3. Set the timer to "00", the timer is cancelled.

### **Pause (For HO36BI4, HO36BIZ4, HO39BI5, HO66BIZ4, HO69BIZ5)**

Pause function is to stop all heating but still keep all the setting you set, in case you have any interruption when cooking. You can revert all setting back easily with this function.

#### **To use Pause function**

Touch the pause function key (8), all the heating zones stop working, All the zone indicators show "||".

#### **Cancel Pause function**

Touching the Pause function key (8) again, all the heating zones will revert to its original setting.

**NOTE:** The function is available when one or multi heating zones are working.

**NOTE:** If you don't cancel the stop Pause mode within 30 minutes, the induction hob will automatically switch off.

### **Keep warm function (For HO36BIZ4, HO39BI5, HO66BIZ4, HO69BIZ5)**

The warming function is used to keep cooked food warm. Hence this function can also be used as melting or simmer function.

#### **To enter keep warm mode**

1. Selecting the heating zone key (4) that you want to set keep warm.
2. Press the key (11) to start the keep warm function,



3. Wait for a while, the indicator show "🔥", the zone is working under keep warm mode.

### To exit keep warm mode

1. Selecting the heating zone key (4) that you want to cancel, then press the key (11) to cancel the keep warm function.


**NOTE:** For HO66BIZ4 and HO69BIZ5, please make sure the key (11) is on before you activate this function.

### **Flexible Zone (For HO36BIZ4, HO66BIZ4, HO69BIZ5)**


If your induction hob has Flexible zone function, the area can be used as a single bigger zone, to have better cooking experience on some special cookware like griddle etc.

- Flexible area is made of two independent inductors that can be controlled separately. When working as flexible zone, a cookware is moved from one zone to the other within the area keeping the same power level of the zone where the cookware originally placed, and the part that is not covered by cookware is automatically switched off.

**IMPORTANT:** Make sure to place the cookwares centered on the single cooking zone. The ideal recipe is an oval or rectangular saucepan, or a saucepan. Below is the reference:

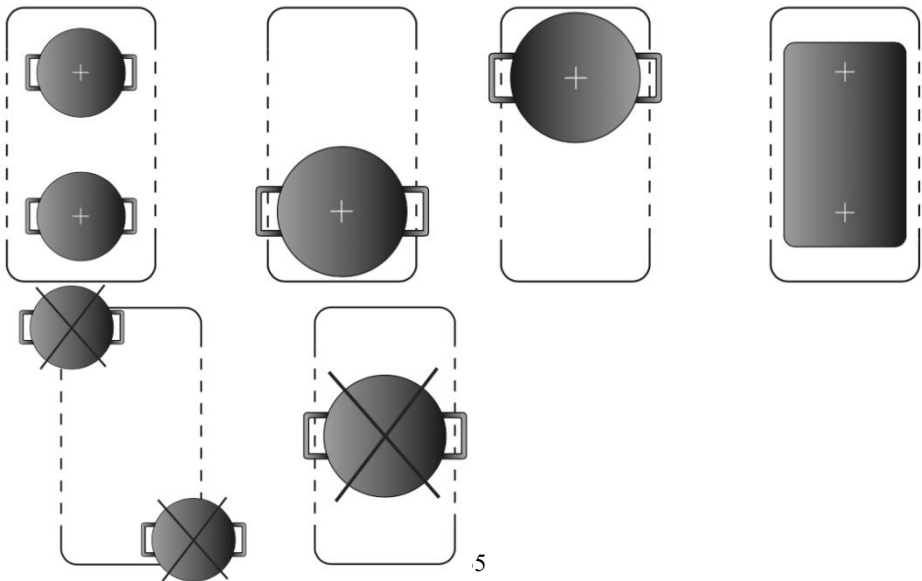

### To use Flexible zone function

- To activate Bridge area, press key (10) until the zone show “  ” and power level.
- Set the power level, and the area is working under bridge mode.

### To cancel Flexible zone function

- Touch Key (4) to select either zone, set the power to use independently. then Bridge zone function is cancelled.

**NOTE:** For HO66BIZ4 and HO69BIZ5, please make sure the key (10) is on before you activate this function.

### Quick menus (Only for HO66BIZ4, HO69BIZ5)

You can choose different quick menus according to your cooking needs.

#### To enter quick menus

1. Selecting the heating zone key (4) that you want to set quick menus.
2. Initially, the light of Key (12) is in half-bright mode. Touch key (12) to enter quick menus and the light of Key (12) will be in full-bright mode. Below is the explanation.



: Fry



: Simmer



: Melt chocolate

#### To exit quick menus

Selecting the heating zone key (4) that you want to cancel, then press the key (12) to cancel the quick menus. The light of Key (12) will be in half-bright mode.

**NOTE:** Please make sure the key (10) is on before you activate this function.

### **ECO mode (Only for HO66BIZ4, HO69BIZ5)**

ECO function is to save energy. Under ECO mode, when the induction cooktop reaches a high temperature for a while, the induction cooktop will automatically reduce to the appropriate power level of operation.

#### **To enter ECO mode:**

Initially, the light of Key (15) is in half-bright mode. Press Key (15) to enter to neat mode and the light of Key (15) will be in full-bright mode.

#### **To exit ECO menus**

Press again Key (15) to cancel neat mode and the light of Key (15) will be in half-bright mode.

### **COOKING GUIDELINES**



Take care when frying as the oil and fat heat up very quickly, particularly if you're using Power Boost. At extremely high temperatures oil and fat will ignite spontaneously and this presents a serious fire risk.



NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.

#### **Cooking Tips**

- When food comes to the boil, reduce the power setting.
- Using a lid will reduce cooking times and save energy by retaining the heat.
- Minimize the amount of liquid or fat to reduce cooking times.
- Start cooking on a high power and reduce it when the food has been well heated.

#### **SIMMERING / COOKING OF RICE**

- Simmering is cooking with a temperature of approx. 85 0C. At this temperature small bubbles ascend to the surface of the cooking liquid. Simmering is a perfect way to cook delicious soups and stews as the flavours of the food unfold completely without being over-heated. You should also cook egg-based sauces and sauces thickened with flour in this way.
- Some cooking procedures, including the cooking of rice with the absorption-method (= the water is consumed completely), require a setting above the lowest power level, so the food is cooked within the recommended cooking time.

## **STEAKS**

1. Take the meat out of the fridge and let it rest at room temperature for approx. 20 minutes.
2. Heat up a pan with a heavy base.
3. Rub both sides of the steak with oil. Drizzle a small amount of oil into the hot pan and place the steak into the pan.
4. Turn the meat just once while cooking. The exact cooking time depends from the size of your steak and your individual preferences (medium, medium rare etc.). So the cooking time of each side may vary from 2 to 8 minutes. Press the steak to check the cooking result - a firm steak is well done.
5. Leave the steak on a warm plate for a few minutes; so it will become tender.

## **ASIAN-STYLE COOKING**

1. Choose a wok with a flat base or a big pan.
2. Prepare all ingredients and the cooking utensils you need. Asian-style cooking should work fast. If you want to cook a big amount of food, you should divide the food into several portions.
3. Preheat the wok / pan briefly and add two tablespoons of oil.
4. Cook the meat first. Put it aside and keep it warm.
5. Now cook the vegetable. When the vegetable is hot but still crisp, reduce the power level. Add the meat and, if desired, a sauce.
6. Sauté the complete food carefully so all components are hot.
7. Serve immediately

## **Saving of energy**

- Use proper cookware for cooking.
- Cookware with thick, flat bases can save up to 1/3 of electric energy. Remember to cover your cookware if possible; otherwise you will use four times as much energy!
- Match the size of the cookware to the surface of the heating plate. A cookware should never be smaller than a heating plate.
- Ensure that the heating plates and the cookware are clean.
- Soils prevent heat-transfer. Repeatedly burnt-on spillages can often be removed by products, which will damage the environment, only.
- Do not uncover the cookware too often (a watched pot-content will never boil!).
- You can use the residual heat for saving energy when starting a new cooking procedure on a cooking zone which is still warm / hot.



## 4. CARE AND CLEANING

- Clean the hob after use.
- Clean the glass-ceramic with a commercially available detergent for glass-ceramic. Use a special sponge and warm water.
- Remove residuals on the glass-ceramic with a soft cloth.
- Do not scrub the glass-ceramic.
- Remove residuals with a silicon-made scraper, which is suitable for glass-ceramic. Such scrapers are commercially available.

What?	How?
Dirty stuff on glass (fingerprints, marks, residual stains or non-sugary spillovers on the glass).	<ol style="list-style-type: none"> <li>1. Switch off the power of the hob.</li> <li>2. Apply a hob cleaner for glass ceramic while the glass is still warm (but not hot!)</li> <li>3. Rinse and wipe dry with a clean cloth or paper towel.</li> <li>4. Switch the power to the hob back on.</li> </ol>
Boilovers, melts, and hot sugary spills on the glass	<p>Remove these immediately with a fish slice, palette knife or razor blade scraper suitable for ceramic glass hobs, but beware of hot cooking zone surfaces which are still hot.</p> <ol style="list-style-type: none"> <li>1. Switch the power to the hob off at the wall.</li> <li>2. Hold the blade or utensil at a 30° angle and scrape the soiling or spill to a cool area of the hob.</li> <li>3. Clean the soiling or spill up with a dish cloth or paper towel.</li> <li>4. Proceed as described in steps 2 - 4 in the previous section.</li> </ol>
Spillovers on the touch controls	<ol style="list-style-type: none"> <li>1. Switch off the power of the hob.</li> <li>2. Remove the spillovers</li> <li>3. Wipe the touch control area with a clean damp sponge or cloth, then wipe the area completely dry with a paper towel.</li> <li>4. Switch the power to the hob back on.</li> </ol>

## **IMPORTANT!**


- When the hob is switched off, there will be no 'hot surface' indication but the cooking zone may still be hot! Take extreme care! Disconnect the appliance from the mains before maintenance (fuse box of your household power supply)!
- Do not use a steam cleaner. Risk of electric shock! The steam can damage the electric components of the appliance.
- Heavy-duty scourers, some nylon scourers and harsh/abrasive cleaning agents may scratch the glass. Always read the label to check if your cleaner or scourer is suitable.
- Never leave cleaning residue on the hob: the glass may become stained.
- Remove stains left by melts and sugary food or spillovers as soon as possible. If left to cool on the glass, they may be difficult to remove or even permanently damage the glass surface.
- Cut hazard: when the safety cover is retracted, the blade in a scraper is razor-sharp. Use with extreme care and always store safely and out of reach of children.
- The hob may beep and turn itself off, and the touch controls may not function while there is liquid on them. Make sure you wipe the touch control area dry before turning the hob back on.

## 5. QUESTIONS AND QUICK CHECK

### EMERGENCY MEASURES:

1. Switch off the entire appliance.
  2. Disconnect the appliance from the mains (fuse box of your household power supply).
  3. Contact the shop you purchased the appliance at.
- Check the schedule below before you contact the shop you purchased the appliance at.

Problem	Possible causes and What to do
The hob cannot be turned on.	No power. 1. Check the connection to the power supply and make sure it is switched on. 2. Check whether there is a power outage in your home or area. 3. Check the household fuse box. 4.If you've checked everything and the problem persists, call a qualified technician.
The touch controls are unresponsive.	The control panel is locked by Child lock function. Unlock the controls. See section 'Using your hob' for instructions.
The touch controls are difficult to operate.	There may be a slight film of water over the controls or you may be using the tip of your finger when touching the controls. Make sure the touch control area is dry and use the ball of your finger when touching the controls.
The glass is being scratched.	Rough-edged cookware. Unsuitable, abrasive scourer or cleaning products being used. Use cookware with flat and smooth bases. See 'Choosing the right cookware'. See 'Care and cleaning'.
Some pans make crackling or clicking noises.	This may be caused by the material of your cookware (layers of different metals vibrating differently). This is normal for cookware and does not indicate a fault.

<p>The induction hob makes a low humming noise at some certain power setting.</p>	<p>This is caused by the technology of induction cooking. This is normal, but the noise may quiet down or disappear completely when you change the power level setting.</p>
<p>Fan noise coming from the induction hob.</p>	<p>A cooling fan is built in your induction hob which prevent the electronics from overheating. It may continue to run even after you've turned the induction hob off. This is normal and needs no action. Do not switch the power to the induction hob off at the wall while the fan is running.</p>
<p>Pans do not become hot and appears  in the display.</p>	<p>The induction hob cannot detect the pan. Check the pan base size, if it is too small for the cooking zone or not properly centered. Use cookware suitable for induction cooking. See section 'Choosing the right cookware'. Centre the pan and make sure that its base matches the size of the cooking zone.</p>
<p>The induction hob or a zone turn itself off unexpectedly. A tone sounds and error code is displayed.</p>	<p>Technical fault. Please note down the error code (typically alternating with one or two digits in the cooking timer display)., switch the power to the induction hob off at the wall, and contact a qualified technician.</p>

If the appliance shows a malfunction not noted on the schedule above or if you have checked all items on the above schedule but the problem still exists, please contact the shop you purchased the appliance at.

## 6. ERROR CODE

If an abnormality comes up, the hob will enter the protective state automatically and display corresponding protective codes:

### Error Code for Induction hob

Problem	Possible causes	What to do
E1	Signal lost (PCB failure)	Please contact after sales service.
E2/E3	Abnormal high/Low input voltage	Stop cooking and wait until input voltage back to normal. If not please contact service center.
E4/E5/E6	Thermistor failure.	Please contact service center to repair.
E7	Abnormal high temperature (dry burning)	Cut off power, wait for 30min and switch on. If still not working, please contact service.
E8/E9	Failure of IGBT sensor	Please contact service center to repair.
E0	IGBT Overheat	Check if the fan is still working. If not please contact service center to repair.
EE	Display PCB failure.	Please contact service center.

The above are the judgment and inspection of common failures.

**ATTENTION! To avoid danger, please do not disassemble the unit by yourself!**

## 7. WASTE MANAGEMENT



**DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary. Do not remove the symbol from the appliance.**

This appliance is labeled in compliance with European directive 2002/96/EC for Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is disposed of correctly, you will help prevent any possible damage to the environment and to human health, which might otherwise be caused if it were disposed of in the wrong way.

The symbol on the product indicates that it may not be treated as normal household waste. It should be taken to a collection point for the recycling of electrical and electronic goods.

- Old and unused appliances must be send for disposal to the responsible recycling centre. Never expose to open flames.
- Before you dispose of an old appliance, render it inoperative. Unplug the appliance and cut off the entire power cord. Dispose of the power cord and the plug immediately.
- Dispose of any paper and cardboard into the corresponding containers.

This appliance requires specialist waste disposal. For further information regarding the treatment, recover and recycling of this product please contact your local council, your household waste disposal service, or the shop where you purchased it.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.